

MOUNT THE 2DIN METAL BRACKETS ON THE 2DIN AFTERMARKET RADIO



INSTALL THE AFTERMARKET RADIO AND REASSEMBLE THE DASHBOARD ON THE CAR IN REVERSE ORDER TO FINISH INSTALLATION

IMPORTANT: USE AFTERMARKET RADIO WITH MAXIMUM DEPTH OF 150mm

---

MANUAL INSTRUCTIONS



2DIN FITTING KIT  
C1-108-AYGO 2014>



REMOVE THE OEM UNIT RADIO AND THE OEM DASHBOARD AS SHOW ON THE PICTURE




FASTEN THE PLASTIC HOLDER ON THE METAL PLATE SUPPLIED USING THE OEM SCREW AND CLIP




UNSCREW THE OEM METAL BRACKET



REMOVE THE PLASTIC HOLDER POSITIONED BELOW THE OEM RADIO

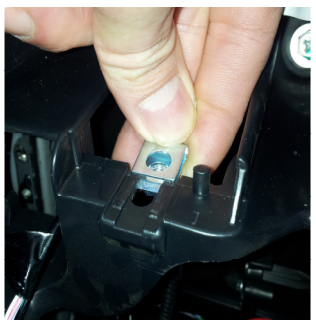

REMOVE CLIP AND ORIGINAL SCREW TO BE USED FOR FIXING THE PLASTIC HOLDER

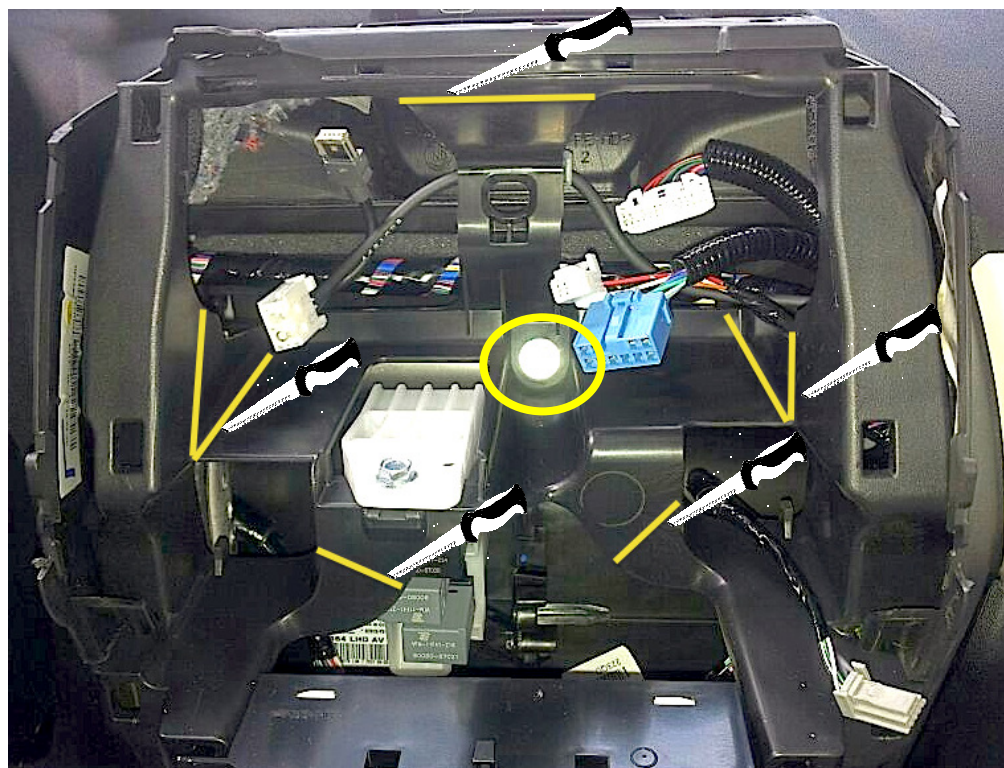

CUT OEM DASHBOARD IN THE POSITIONS SHOWN IN THE PICTURE, UNSCREW THE CENTRAL SCREW POSITIONED ON THE BOTTOM, AND REMOVE THIS PART TO ALLOW THE FIXING OF THE AFTERMARKET RADIO.