

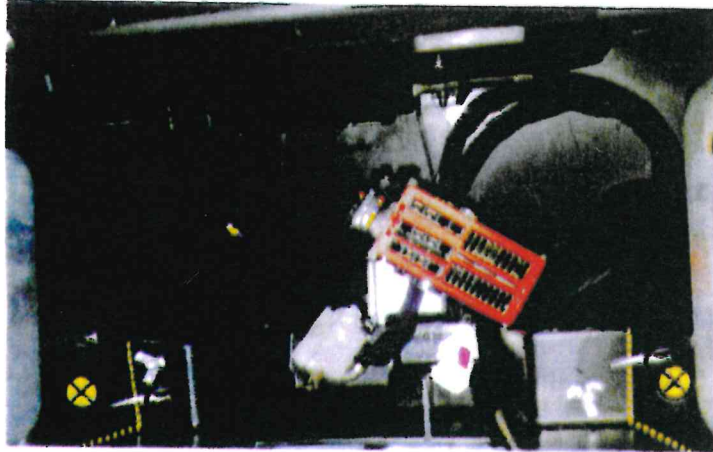


## 2DIN KIT FIAT DOBLO'-OPEL COMBO 2015

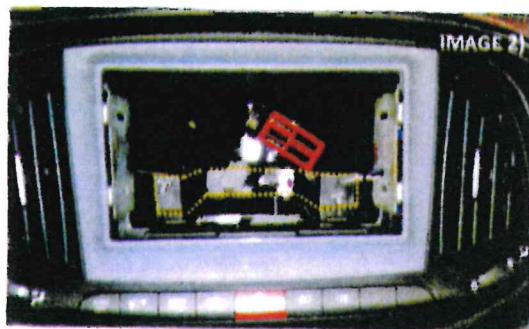

CUT OEM DASHBOARD IN THE POSITION SHOWN IN THE PICTURE AND REMOVE THIS PARTS ( ⊗ )

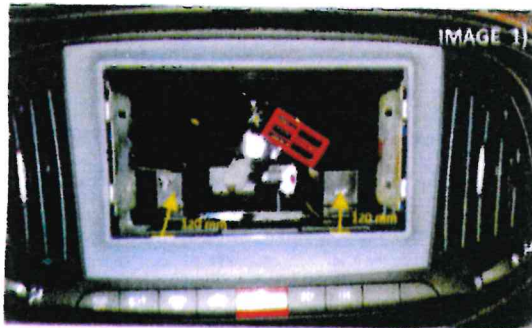

**Important:**

MAX DEPTH 120 mm

It's necessary to cut all the inner parts of OEM dashboard to install a 2DIN radio with deeper than 120 mm